



BARRIERBOARD

A U S T R A L I A

NOISE CONTROL SPECIALIST


Distributed by: Barrierboard Aust Pty Ltd

3/1625 Main Road, Research, Vic. 3095


www.barrierboard.com.au

Barrierboard™ A10 & A16 Installation

What you need

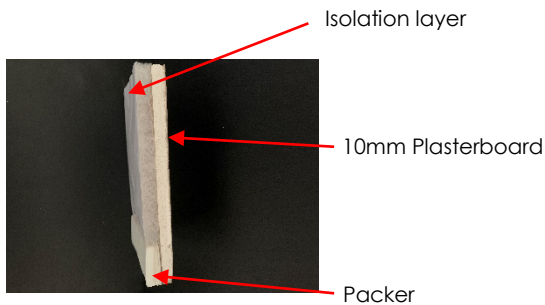

Barrierboard™ A10 & A16 Panels

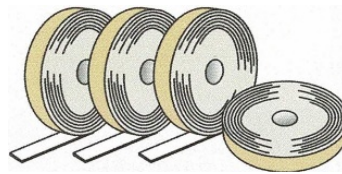

Barrierboard™ Floor Seal



50-60mm Screws

How to Install

1. Starting from an internal corner, clean floor of all loose material where Barrierboard Advantage™ panels are to be fitted
2. Apply Barrierboard™ floor seal tape in position on floor so it provides a seal under the rear 10mm section of Barrierboard Advantage™ panels. Press floor seal firmly into contact with the floor.

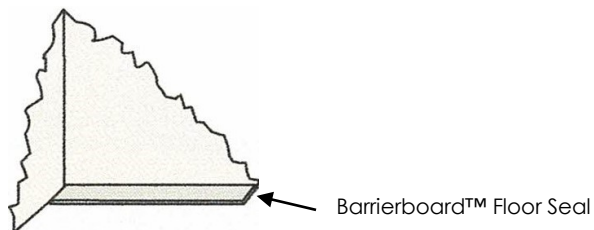


Fig 1

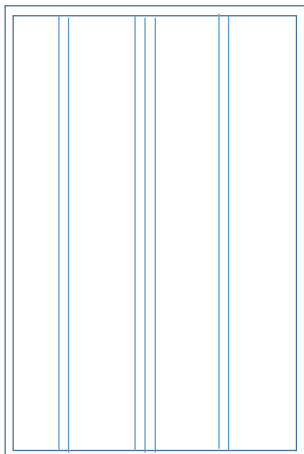


Fig 2

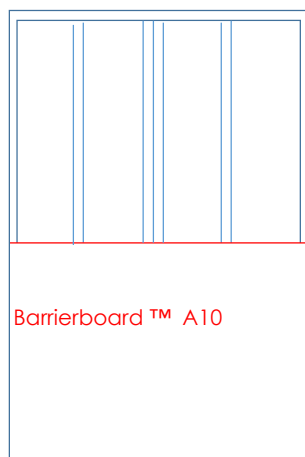


Fig 3

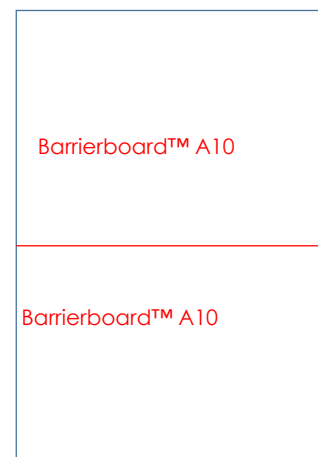


Fig 1 Stud frame. For best results set double studs at 1200mm centres for fixing of Fire Rated Plasterboard.

Fig 2 Barrierboard™ A10 fixed horizontally to frame through rebates and glued in centre of the board.

Fig 3 Barrierboard™ A10 fixed to wall ready for Fire Rated plaster to fix to peel and stick

Fig 4

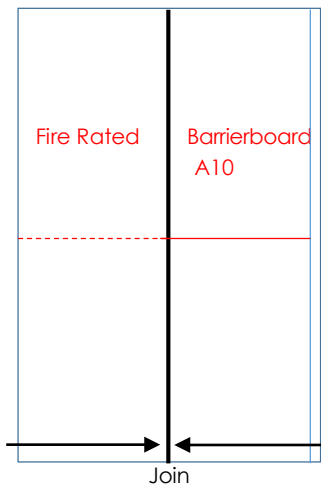


Fig 5

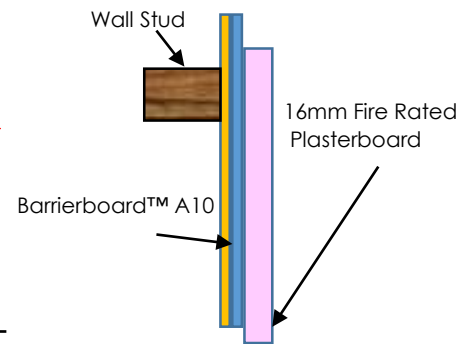


Fig 4 Fire Rated plasterboard adhered to the PSA peel and stick

Fig 5 Fire Rated Plasterboard ready for stop and finish



BARRIERBOARD

— A U S T R A L I A —
NOISE CONTROL SPECIALIST

Distributed by: Barrierboard Aust Pty Ltd
3/1625 Main Road, Research, Vic. 3095

www.barrierboard.com.au